



How to sew a Pad Pocket

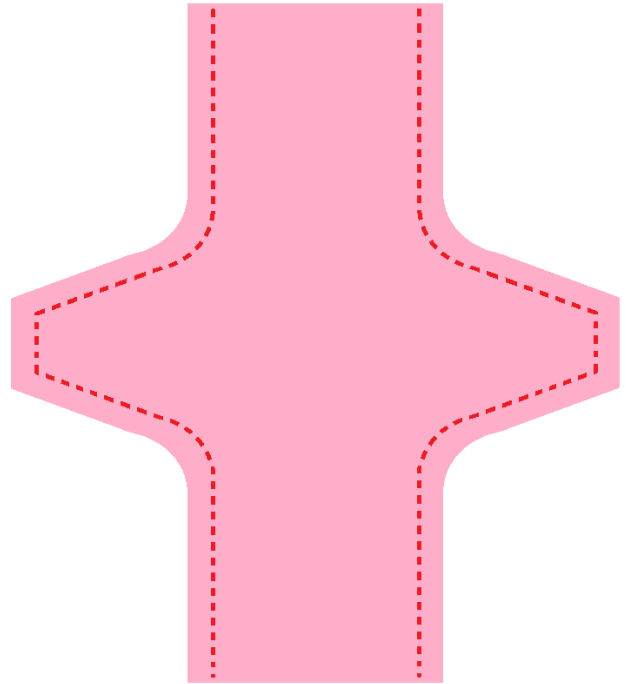

1. Check that the pieces have been collated correctly and accurately.

2. With a 5mm (1/4") seam straight stitch each side. Reverse at both ends to secure.

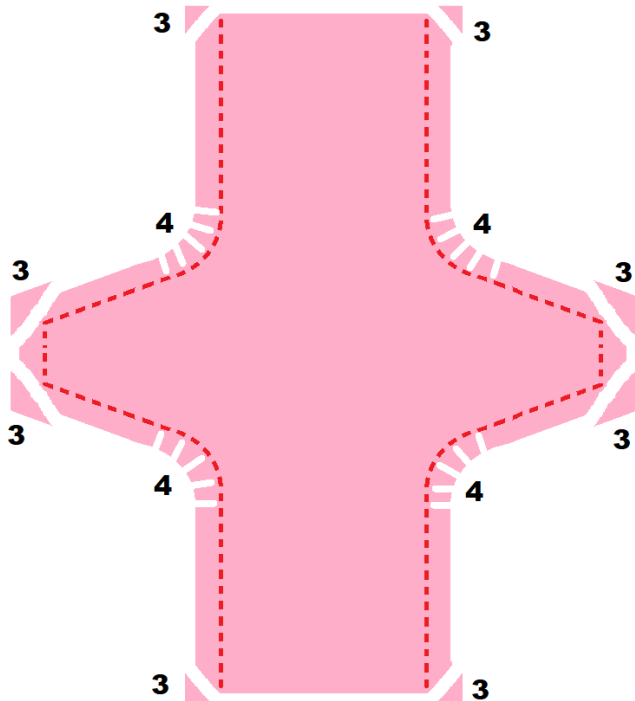

3. Trim the outer corners (take care not to cut stitching)

4. Clip the inner curves (avoid stitching)


5. Turn the right way round. Poke out the corners.

6. Straight stitch across the end seams 5mm (1/4") seam allowance.

7. Clip the corners.



8. Turn the pockets so the new seam is now on the inside. Poke out the corners.

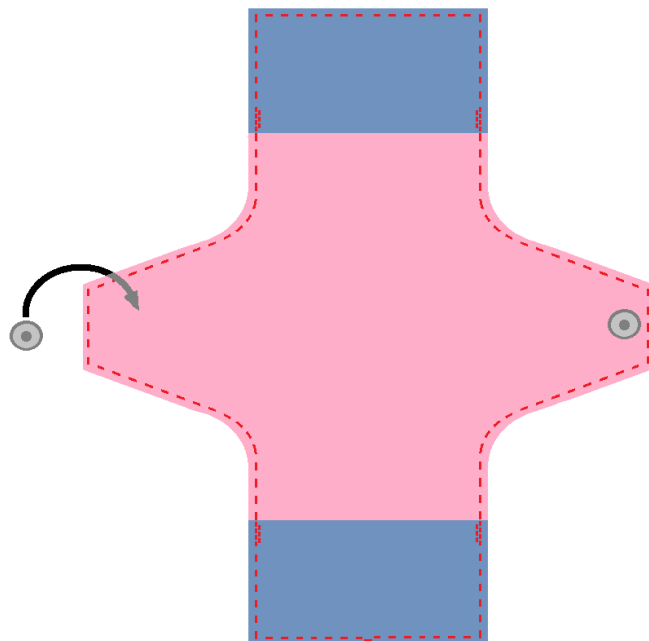

9. Top stitch 3mm from the edge all the way round, strengthening the weak points.

10. Press

11. Hand sew press studs on face and back 1cm in. Check that they join.

